

## Extensions (includes mounting bolts)

Part Number	Diameter		Length	
	(IN.)	(MM)	(FT.)	(M)
08931503	2	51	3	.9
08931506	2	51	6	1.8
08931509	2	51	9	2.7
08931512	2	51	12	3.6
08934503	4	102	3	.9
08934506	4	102	6	1.8
08934509	4	102	9	2.7
08934512	4	102	12	3.6
08935503	5	127	3	.9
08935506	5	127	6	1.8
08935509	5	127	9	2.7
08935512	5	127	12	3.6

Part Number	Diameter		Length	
	(IN.)	(MM)	(FT.)	(M)
08936503	6	152	3	.9
08936506	6	152	6	1.8
08936509	6	152	9	2.7
08936512	6	152	12	3.6
08988503	8	203	3	.9
08988506	8	203	6	1.8
08988509	8	203	9	2.7
08988512	8	203	12	3.6

**!** **ORDER CAREFULLY!**  
This item is made-to-order and is not returnable.



## Cable Spreaders

4-6 inch Cable Spreaders attach to the Condux 4-6 inch Flex Guides to keep the cable separated as it goes into the flex guide. Comes standard with nylon rollers to help minimize friction and positive locking pins for attaching to the Flex Guide Bells.


Part Number	Description	Bell Size	
		(in)	(mm)
08041910	4-way Spreader, Cable Bell Adapter	4	102
08041915	4-way Spreader, Cable Bell Adapter	5	127
08041920	4-way Spreader, Cable Bell Adapter	6	152



## Lube Adapter Plates for Flex Guides

Lube adapter plates may be used at either the bell end or on the duct adapter end. Simply remove the bell or adapter end and insert lube adapter plate then use the supplied longer bolts to finish the lube adapter plate assembly.

Part Number	Description	Size	
		(in)	(mm)
08934075	Lube Adapter Plates for Flex Guides	4	102
08935075	Lube Adapter Plates for Flex Guides	5	127
08936075	Lube Adapter Plates for Flex Guides	6	152

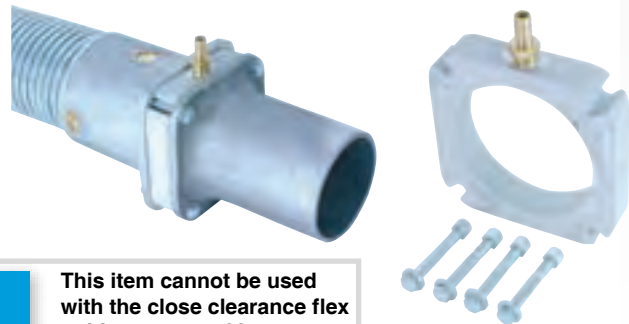

**!** **This item cannot be used with the close clearance flex guides on page 68.**

## 5 or 6 Gallon Lube Pump

Lube pump quickly attaches to the lube adapter plate. Comes with four feet of hose. (Longer lengths not available) Fits on either a 5 or 6 gallon pail.

Part Number	Description
08931100	5 or 6 Gallon Lube Pump

